

# DL-125C, DL-125CA





## **Quick Start Guide**

### 1. PROGRAMMING REGULAR PHONE NUMBERS

The dialer can call up to 4 regular phone numbers per zone. To program the numbers to be called when zone 1 (Z1) is in alarm:

- Press [PROG] [1] [#] this selects location 1.
- After the dial LED flashes twice, enter phone number to dial
- Finish by pressing (#).

Example:

PROG 1 # 5 5 5 1 2 1 2 # - this would dial phone number 555-1212 and deliver the message programmed for zone 1.

Program the remaining phone numbers (2, 3 and 4) as above. For example:

- Press [PROG][2][#] this selects location 2.
- After the dial LED flashes twice, enter phone number to dial.
- Finish by pressing [#].

Program numbers for **zone 2 (Z2)** in the same manner, except that the location numbers will be 5, 6, 7, & 8. Start with pressing [PROS][5][#] - this selects location 5.

## 2. PROGRAMMING NUMERIC PAGERS

Pagers require two phone number locations. Therefore, each DL-125C / DL-125CA zone can call a maximum of two pagers. Proceed as follows to program pagers into zone 1:

- Press [PROG][1][#] this selects location 1.
- After the dial LED flashes twice, enter the phone number of the numeric pager.
- Press ★ 4 this links the current location with the next for pager function.
- Press (#).
- Press [PROG][2][#] this selects location 2.
- After the dial led flashes twice, press ★ 4 this links this location to the previous location for pager function.

- Press [1][0] to provide a 10-second delay allowing the paging company to pick up (you can enter any two digit value, but 10 seconds works in most cases).
- Enter the number you wish to appear on the pager's display and finish by pressing (#).

Example:

PROG 1 # 5 5 5 2 5 2 5 ★ 4 # and then:

PROG 2 # ★ 4 1 0 9 9 9 # - this would deliver the message "999" to a pager at phone No. 555-2525.

If you wish to program another pager in zone 1, follow these same steps, but use locations 3 and 4. To program pagers into zone 2, use locations 5 & 6 and/or locations 7 & 8.

### 3. RECORDING VOICE MESSAGES

The DL-125C / DL-125CA contains three locations for voice messages. The total recording time can not exceed 19 seconds.

**Location / common message** (up to 14.5 sec.) - name and address that is common to AL-1 and AL-2 messages.

**Message AL-1** (up to 2.5 sec.) is the alarm type message for zone 1 (burglar alarm activation, for example).

**Message AL-2** (up to 2 sec.) is the alarm type message for zone 2 (low temperature detection, for example).

You must record <u>at least</u> the common message and one of the alarm messages (AL-1 or AL-2). You cannot record only a common message. Recording should be done in the following order:

#### To record AL-1 & AL-2 (location message):

- Press [#]
- Press and hold both (AL-1) and (AL-2) buttons at the same time while reading the message aloud - red LED will be on.
- Release (AL-1) and (AL-2) and press (#) red LED will turn off.

#### To record AL-1 message:

- Press (#)
- Press and hold (AL-1) while reading the message aloud red LED will be on.
- Release AL-1 and press [#] red LED will turn off.

#### To record AL-2 message:

- Press #
- Press and hold AL-2 while reading the message aloud red LED will be on.
- Release AL-2 and press # red LED will turn off.

For more advanced applications, refer to the DL-125C installation instructions, or contact the technical support.





MADE IN ISRAEL

VISONIC LTD. (ISRAEL): P.O.B 22020 TEL-AVIV 61220 ISRAEL. PHONE: (972-3) 645-6789, FAX: (972-3) 645-6788
VISONIC INC. (U.S.A.): ): 65 WEST DUDLEY TOWN ROAD, BLOOMFIELD CT. 06002-1376. PHONE: (860) 243-0833, (800) 223-0020 FAX: (860) 242-8094
VISONIC LTD. (UK): FRASER ROAD, PRIORY BUSINESS PARK, BEDFORD MK44 3WH. PHONE: (0870) 7300800 FAX: (0870) 7300801
INTERNET: www.visonic.com

©VISONIC LTD. 2008 DL-125C, DL-125CA DE5803Q (REV. 1, 10/08)

,